


Surround Instructions

Designed to be fitted without having to disconnect sockets or switches by trapping the surround between the fascia plate and the wall, meaning there is no need for adhesive backing or tapes. They can be easily removed when decorating or changed to match new colour schemes.

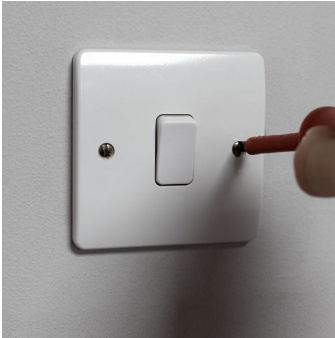

-First peel the protective film off the surround, taking care not to scratch the acrylic.

-Unscrew the fascia plate of the switch/socket.



-You do not have to disconnect the socket.



-Slide the surround diagonally (corner to corner) over the plate.



-Then screw the plate back into place.



-This then ensures the surround is held in place between the plate and the wall.

Longer screws may be needed in some instances. Take care not to touch the wiring and ensure the switch/socket is turned off during fitting. If you are unsure please consult a qualified electrician.